


RAM Installation Instructions RM-640x:

Note: Earlier RM-640x models came with a 6x1GB memory configuration. Customers with servers having this configuration must contact SAFARI Montage Technical Support (800-782-7230) before proceeding.

1. Power down the SAFARI Montage server and unplug the power supply.
2. Remove the cover by turning the latch release lock, located on top of the system, to the un-locked position, and then lifting up on the latch releasing the cover.
3. Remove the cooling shroud by lifting on the handles of the shroud and pulling out of the server.
4. Using the diagram below, locate the DIMM (memory) locations on the server's motherboard.

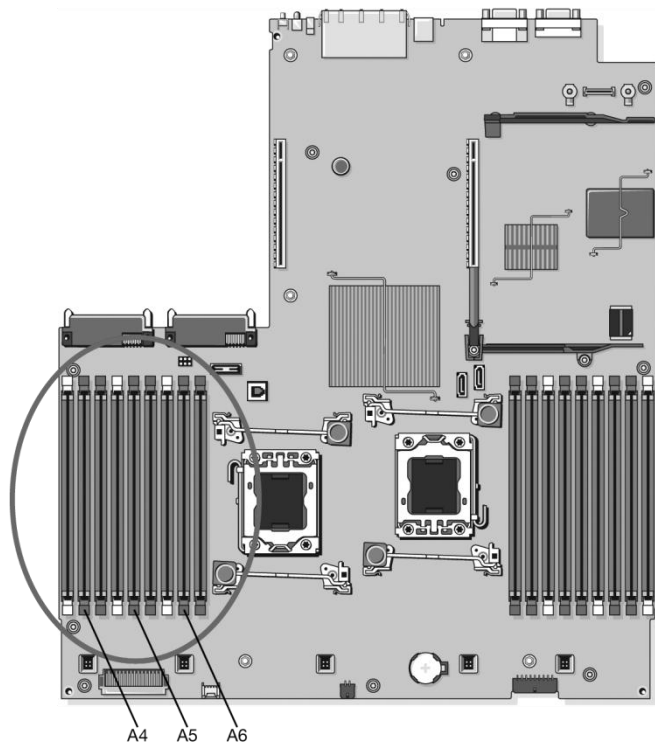

5. Insert the newly received DIMMs by aligning the DIMM's edge connector with the alignment keys on the socket and then insert the DIMM in to the socket by pressing down with your thumbs while pulling up the ejectors with your index fingers until the DIMM locks into the socket. DIMM sockets to be used are A4, A5 and A6.
6. Replace the cooling shroud and cover removed in Steps 2 and 3.
7. Apply power and turn the server on.