Configuring the AXIS[®] Q7401 Video Encoder for Multicast Playback Using SAFARI Montage[®] Selective Video Streaming

PLEASE NOTE BEFORE BEGINNING: These instructions supplement the manufacturer's installation guide and describe the configuration of the AXIS Q7401 Video Encoder for multicast playback using SAFARI Montage Selective Video Streaming.

Requirements:

- AXIS Q7401 Video Encoder
- IP address of the AXIS Q7401 Video Encoder
- SAFARI Montage Media Player, available through SAFARI Montage by selecting Help -> Browser and Plug-in Downloads -> SAFARI Montage Media Player

AXIS Installation and Configuration:

1. Install and configure the AXIS Q7401 Video Encoder in accordance with the manufacturer's installation guide. The AXIS Q7401 Installation Guide is available in the box with the encoder or via download at the AXIS Communication's website.

There are two utilities provided by AXIS Communication that can be used to access and configure your encoder. These utilities are the **AXIS IP Utility** and **AXIS Camera Management**. These utilities are located on the CD that accompanied your encoder or can be downloaded from the AXIS Communication's website. Either utility will locate any AXIS encoders on your network and allow you to configure them in accordance with your networking infrastructure. Refer to pages 7 and 8 of the AXIS Q7401 Installation Guide for details on using these utilities.

Note: The AXIS Q7401 is set to DHCP from the factory. If your network does not have DHCP, the encoder will use **109.168.0.90** as the default address.

- 2. Install the SAFARI Montage Media Player and set as the default player used in SAFARI Montage.
- 3. Navigate to the web management interface of the AXIS Q7401 by using a web browser and the unit's IP address.

Note: Microsoft[®] Internet Explorer[®] users. When accessing the encoder for the first time, you will be required to install three add-ons, the **AXIS Media Control**, **H.264 Decoder** and **AAC Decoder**. These three add-ons must be installed to all workstations that will be using Microsoft Internet Explorer to access and view streaming media from the encoder. The only way to install these three add-ons is to access the encoder's web management interface from each workstation.

4. Select **Setup** from the top right-hand of the screen.

Note: The username and password created during the initial setup of the AXIS Encoder will be required.

5. Expand the **Basic Setup** section of the left-hand navigation.



6. Select option **1. Users** and configure the following:

User Settings

• Enable (check) Enable anonymous viewer login and click on the Save button.

Users			0
User List			
User Name	User Group	User Info	
root	Administrator		
Add M	odify Remove)	
Allow password typ	e: Encrypted & unencr	ypted 💌	
User Settings			
Enable anonym	ous viewer login (no us	er name or password required)	
Enable anonym	ous PTZ control login (no user name or password required)	
🗹 Enable Basic S	etup Save	Reset	

- 7. Select option **3.** Date & Time, set the date and time settings for the unit, and click on the Save button.
- Select option 4. Video Stream, configure the following settings and click on the Save button for each tab.
 Note: The settings below are recommended values that may be adjusted, based on local requirements.
 - Image Tab
 - Resolution: 4CIF (704 x 480)
 - Compression: between 20 and 30

Image Audio	H.264 MJPEG
Image Appearance	
Resolution:	Aspect ratio correction
	4CIF (704 × 480)
Compression:	30 [0100]
Mirror image	
Color setting:	Color
Video Stream	
Maximum frame rate:	
 Unlimited 	
O Limited to	[130] fps per viewer
Text Overlay Settings	
Include date	Include time
Include text:	
Text color: white 💌	Text background color: black
Place text/date/time at to	p 🕑 of image



Audio Tab

• Enable Audio: Checked

Enable Audio	
Enable audio	Note that the image preview is without audio.
Current Audio Settings: • AAC, Half duplex	

H.264 Tab

- Use: Constant bit rate
- Target bit rate: 3000 kbit/s

Image Audio	H.264 MJPEG
GOV Settings	
Length:	32 [1]
Bit Rate Control	
Use:	🔿 Variable bit rate
	 Constant bit rate
Target bit rate:	3000 kbit/s
Priority:	None 💙

9. Select option 5. Audio Settings, configure the following settings and click on the Save button.

Audio Channels

• Audio mode: Half duplex

Audio Input

- Source: Line
- Input Gain: 12 dB (adjust based on source and volume needs)
- Encoding: AAC (this setting is required for multicast support with SAFARI Montage Selective Video Streaming)

Audio Settings		3
Audio Channels		
Audio mode:	Half duplex 💌	
Audio Input		
Source:	Line	
Enable microphon be off.	e power. If your microphone is dynamic or battery powered, this shoul	d
Input gain:	12 💌 dB (0 = medium default level)	
Encoding:	AAC	
Sample rate:	16 💌 kHz	
Bit rate:	32 💌 kbits/s	
Alarm level:	50 [0100] %	
Audio Output		
Output gain:	0 🕑 dB (0 = medium default level)	
Note: The Java applet	only supports G711 audio. QuickTime supports G711 and AAC.	
	Save Reset	



- 10. Expand the Live View Config section of the left-hand navigation.
- 11. Configure the following settings in Live View Layout, and click on the Save button.

Stream Profile

• Stream profile: H.264

Default Viewer

- Windows Internet Explorer: AMC (ActiveX)
- Other Browsers: QuickTime

Viewer Settings

• Enable H.264 decoder installation (Checked)

Stream Profile Stream profile: H.264 Show stream profile selection Default Viewer Windows Internet Explorer: AMC (ActiveX)
Stream profile: H.264 Show stream profile selection Default Viewer Windows Internet Explorer: AMC (ActiveX)
Show stream profile selection Default Viewer Windows Internet Explorer: AMC (ActiveX)
Default Viewer Windows Internet Explorer: AMC (ActiveX)
Windows Internet Explorer: AMC (ActiveX)
Other Browsers: QuickTime
Note: QuickTime is only used with H.264. Motion JPEG will be shown with AMC in Windows Internet Explorer and with server push in other browsers.
Viewer Settings
✓ Show viewer toolbar
Enable H.264 decoder installation
Show crosshair in PTZ joystick mode*
Use PTZ joystick mode as default*
Enable recording button
*Not applicable to AMC (ActiveX).
Action Buttons
Show manual trigger button
Show snapshot button
User Defined Links
Show custom link 1 Use as: ③ cgi link (web link
Name: Custom link 1 URL: http://
□ Show custom link 2 Use as: ③ cgi link ○ web link
Name: Custom link 2 URL: http://
□ Show custom link 3 Use as: ③ cgi link ○ web link
Name: Custom link 3 URL: http://
□ Show custom link 4 Use as: ③ cgi link ○ web link
Name: Custom link 4 URL: http://
Output Buttons
No outputs are specified. Save Reset



12. Expand the **System Options** section of the left-hand navigation, select **Network** -> **TCP/IP** -> **Advanced**, configure the following settings and click on the **Save** button.

RTSP

- Enable RTSP server: Checked
- RTSP port: 554

DNS Configuration ○ Obtain DNS server address via DHCP ♥ Use the following DNS server address: Domain name: (use ; to separate names) Primary DNS server: 172.20.1.55 Secondary DNS server: 172.20.1.44 NTP Configuration ○ Obtain NTP server address via DHCP ♥ Use the following NTP server address: Network address: north-america.poc (host name or IP address) Host Name Configuration ● Use the host name: exis-00408c995249 Enable dynamic DNS updates Register DNS name:	Advanced TCP/IP Settings		
Obtain DNS server address via DHCP View ● Use the following DNS server address:	DNS Configuration		
 Ouse the following DNS server address: Domain name: Primary DNS server: 172.20.1.55 Secondary DNS server: 172.20.1.44 NTP Configuration Obtain NTP server address via DHCP View Ouse the following NTP server address: Network address: north-america.poc (host name or IP address) Host Name Configuration Ouse the host name: axis-00408c995249 Enable dynamic DNS updates Register DNS name: (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address View HTTP HTTP HTTP HTTP server: Auto-Configure Link-Local Address View HTTPS HTTPS HTTPS HTTPS port: 443 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: * If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable RTSP server* RTSP RTSP port: 554 * Auto- streams will be unavailable if this is disabled. Save Reset 	Obtain DNS server address via DHCP View		
Domain name: Domain name: (use ; to separate names) Primary DNS server: 172.20.1.55 Secondary DNS server: 172.20.1.44 NTP Configuration Obtain NTP server address via DHCP View Ouse the following NTP server address: Network address Register DNS name: Attraversal (DNS updates NAT traversal is disabled.	O Use the following DNS server address:		
Primary DNS server: 172.20.1.55 Secondary DNS server: 172.20.1.44 NTP Configuration Obtain NTP server address via DHCP Image: Secondary DNS server: 172.20.1.44 NTP Configuration Image: Secondary DNS server address: Image: Secondary DNS server: Network address: Image: Secondary DNS server: Image: Secondary DNS server address: Image: Secondary DNS server: Image: Secondary DNS server: Image: Secondary DNS server: Seve: Reset	Domain name: (use : to separate names)		
Primiery Dids server: 172.20.1.44 NTP Configuration Obtain NTP server address via DHCP Issee Use the following NTP server address: Network address: Network address: north-america.poc (host name or IP address) Host Name Configuration Issee Use the host name: Issee Use the host name: axis-00408c995249 Enable dynamic DNS updates Register DNS name: Register DNS name: (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address View HTTP HTTP HTTP HTTP HTTP sport: 80 HTTPS HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * If set to blank or 0, a port number will be set automatically upon enable. FTP Isable FTP server RTSP MESP * Linable RTSP server* RTSP * Lable RTSP server* RTSP port: Save	Drimony DNS convert		
Secondary DNS server: 172.20.1.44 NTP Configuration Obtain NTP server address via DHCP View Use the following NTP server address: Network address Net			
NTP Configuration Obtain NTP server address via DHCP ♥ Use the following NTP server address: Network address: north-america.poc (host name or IP address) Host Name Configuration ♥ Use the host name: axis-00408c995249 Enable dynamic DNS updates Register DNS name: (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address View HTTP HTTP HTTP port: 80 HTTPS HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: * If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable FTP server RTSP Enable RTSP server* RTSP port: 554 * H264 video streams will be unavailable if this is disabled. Save Reset 	Secondary DNS server: 172.20.1.44		
Obtain NTP server address via DHCP View <p< td=""><td>NTP Configuration</td></p<>	NTP Configuration		
 Ouse the following NTP server address: Network address:	Obtain NTP server address via DHCP View		
Network address: north-america.poc (host name or IP address) Host Name Configuration Use the host name: axis-00408c995249 Enable dynamic DNS updates Register DNS name: (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address (Axisproduct.example.com) TTL: 80 HTTP HTTP HTTP port: 80 HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * If set to blank or 0, a port number will be set automatically upon enable. FTP Enable RTSP server RTSP Enable RTSP server* RTSP port: 554 * H.264 video streams will be unavailable if this is disabled. 	 Use the following NTP server address: 		
Host Name Configuration ● Use the host name: axis-00408c995249 Enable dynamic DNS updates Register DNS name: (Axisproduct.example.com) TTL: 30 TTL: 30 TTL: 30 Link-Local IPv4 Address M Auto-Configure Link-Local Address M Auto-Configure Link-Local Address HTTP HTTP HTTP port: 80 HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Use manually selected NAT router: Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * If set to blank or 0, a port number will be set automatically upon enable. FTP Enable FTP server RTSP Enable RTSP server* <	Network address: north-america.poc (host name or IP address)		
● Use the host name: axis-00408c995249 ● Enable dynamic DNS updates Register DNS name: (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address View M Auto-Configure Link-Local Address View HTTP 80 HTTPS 80 HTTPS port: 80 HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable FTP server RTSP ✓ Enable RTSP server* RTSP port: 554 *H.264 video streams will be unavailable if this is disabled.	Host Name Configuration		
Enable dynamic DNS updates Register DNS name: (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address View HTTP HTTP HTTP HTTP port: 80 HTTPS HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * * If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable FTP server RTSP MISP * Lable RTSP server* RTSP port: * 554 * H.254 video streams will be unavailable if this is disabled.	Use the host name: axis-00408c995249		
Register DNS name: (Axisproduct.example.com) TTL: 30 Link-Local IPv4 Address View HTTP HTTP port: 80 HTTPS HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * If set to blank or 0, a port number will be set automatically upon enable. FTP Enable FTP server RTSP MTSP port: 554 *H.264 video streams will be unavailable if this is disabled.	Enable dynamic DNS updates		
TTL: 30 Link-Local IPv4 Address ✓ Auto-Configure Link-Local Address View HTTP HTTP HTTP port: 80 HTTPS HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * * If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable FTP server RTSP ✓ Enable RTSP server* RTSP port: 554 *H.264 video streams will be unavailable if this is disabled.	Register DNS name: (Axisproduct.example.com)		
Link-Local IPv4 Address ✓ Auto-Configure Link-Local Address W HTTP HTTP HTTPS HTTPS port: 80 HTTPS HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * * If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable FTP server RTSP ✓ Enable RTSP server* RTSP port: 554 *H.264 video streams will be unavailable if this is disabled. Save Reset	TTL: 30		
✓ Auto-Configure Link-Local Address View HTTP HTTP port: 80 HTTPS HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable FTP server RTSP ✓ Enable RTSP server* RTSP port: 554 *H.264 video streams will be unavailable if this is disabled.	Link-Local IPv4 Address		
HTTP HTTP port: 80 HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. NAT traversal is disabled. Use manually selected NAT router: Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable FTP server RTSP ✓ Enable RTSP server* RTSP port: 554 *H.264 video streams will be unavailable if this is disabled.	Auto-Configure Link-Local Address		
HTTP port: 80 HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * * If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable FTP server RTSP ✓ Enable RTSP server* RTSP port: 554 *H.264 video streams will be unavailable if this is disabled. Save Reset	НТТР		
HTTPS HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * * If set to blank or 0, a port number will be set automatically upon enable. FTP Enable FTP server RTSP Enable RTSP server* RTSP 554 *H.264 video streams will be unavailable if this is disabled. Save Reset	HTTP port: 80		
HTTPS port: 443 NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Image: Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * * If set to blank or 0, a port number will be set automatically upon enable. FTP Image: Enable FTP server RTSP Image: Enable RTSP server* Save Reset	HTTPS		
NAT traversal (port mapping) for IPv4 NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * * If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable FTP server RTSP ✓ Enable RTSP server* State *H.264 video streams will be unavailable if this is disabled. Save	HTTPS port: 443		
NAT traversal is disabled. Enable Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * If set to blank or 0, a port number will be set automatically upon enable. FTP Enable FTP server RTSP Enable RTSP server* RTSP port: 554 *H.264 video streams will be unavailable if this is disabled. Save Reset	NAT traversal (port mapping) for IPv4		
Use manually selected NAT router: (LAN IP address) Alternative HTTP port: 0 * If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable FTP server RTSP ✓ Enable RTSP server* RTSP port: *H.264 video streams will be unavailable if this is disabled. Save	NAT traversal is disabled. Enable		
Alternative HTTP port: 0 * * If set to blank or 0, a port number will be set automatically upon enable. FTP Enable FTP server RTSP Enable RTSP server* RTSP port: 554 *H.264 video streams will be unavailable if this is disabled. Save Reset	Use manually selected NAT router: (LAN IP address)		
* If set to blank or 0, a port number will be set automatically upon enable. FTP ✓ Enable FTP server RTSP ✓ Enable RTSP server* RTSP port: 554 *H.264 video streams will be unavailable if this is disabled. Save Reset	Alternative HTTP port: 0 *		
FTP Enable FTP server RTSP	* If set to blank or 0, a port number will be set automatically upon enable.		
Enable FTP server	FTP		
RTSP ✓ Enable RTSP server* RTSP port: 554 *H.264 video streams will be unavailable if this is disabled. Save Reset	Enable FTP server		
Enable RTSP server* RTSP port: 554 *H.264 video streams will be unavailable if this is disabled. Save Reset	RTSP		
RTSP port: 554 *H.264 video streams will be unavailable if this is disabled. Save	Enable RTSP server*		
*H.264 video streams will be unavailable if this is disabled.	RTSP port: 554		
Save Reset	*H.264 video streams will be unavailable if this is disabled.		
	Save Reset		

13. Expand the **System Options** section of the left-hand navigation, select **Network** -> **RTP** in the left-hand navigation, configure the following settings and click on the **Save** button.

Port Range

- Start port: 50000
- End port: 50999

Multicast

- Video address: < Multicast Address > (as determined by your network administrator)
- Video port: **50000**
- Audio address: < Multicast Address > (enter as determined by your network administrator)
- Audio port: **50002**

RTP / H.2	64	0
Port Range		
Start port:	50000 [102465534]	
End port:	50999 [102565535]	
Multicast		
Video address:	239.225.82.73	
Video port:	50000 [0, 102465534; even values only]*	
Audio address:	239.225.82.73	
Audio port:	50002 [0, 102465534; even values only]*	
Time to live:	5 [1255]	
*0 = Port automa	tically selected within the port range specified above.	
	Save Reset	

14. Click on **Live View**, located in the top right-hand of the screen, to confirm the video stream from the encoder.



Configuring a Multicast Stream in SAFARI Montage:

- 1. Log in to SAFARI Montage as an administrator.
- 2. Select the Admin tab in the header.
- 3. Select **Selective Video Streaming** -> **Video Streaming** from the left-hand navigation.
- 4. Select **New Stream** at the top of the stream list and configure the following settings:

Setting Name	Setting
Video Stream Name	Enter an appropriate name for the video stream
Active Stream	Checked
Reservations	Checked or unchecked as required
School News	Checked or unchecked as required
School	Select a school to associate with the video stream; typically the school responsible for controlling
URL	Enter the URL for the video stream, using the following syntax
	For Unicast: rtsp:// <ip address="" axis="" encoder="" of="">/axis-media/media.amp</ip>
	For Multicast:
	axrtpm:// <ip address="" axis="" encoder="" of="">/axis-media/media.amp?codec=h264</ip>
	Note: Enter the IP address of the AXIS encoder, not the multicast address.
Туре	Select the type of stream from the AXIS encoder (Video or Motion JPEG)
Source	Select the video stream's source (DTV, Internet, Cameras or DVD)
Bitrate (Optional)	Enter value in Kb or Mb
Description (Optional)	Enter a description for the video stream
Controlled Devices (Optional)	Select a Pathways SM controllable device; this will allow the user to control
Note: This option only	the source device, e.g., a PTZ camera or DTV tuner, for the video stream
appears when editing a	through the associated Pathways SM virtual remote control.
stream and is not available	Note: Applies only to systems with the Pathways SM Module.
during New Stream setup.	
Assign to (<i>Optional</i>)	Select School Groups or Individual Schools that will have access to view the video stream.
	Note: The school set in the School setting above will always be selected.



	Edit Video Stream	
Video Stream Name:	PBS / Over-the-air Broadcast	
	Max Name Length: 60 characters	
Active Stream:		
Reservations:	Image: The second only allow x users. Maximum is 99. * Streams will not be available to remote schools when reservations are required.	
School News:	\checkmark	
School:	Marion County HS	
URL:	rtsp://172.20.180.20/axis-media/media.amp?videocodec=h264	
Туре:	Video 🗸	
Source:	DTV	
Bitrate:	Kb 💌	
Description:	Over the air broadcast tuned to PBS	
	Max Description Length: 1,000 characters	
Controlled Devices:	Add a Device	
	Assignments	
Assign to:	Individual Schools 🔽 Toggling will uncheck selected items.	
	Ember Middle School KCR School KLM School Ken's Tech Pub School w/Pathways	^
	Kingsway High School Marion County HS May School May School	
	Merge School	
	Mirage School *Remote	
	Inveely's Elementary School - HD OFF	~

- 5. Click on the Save Changes button.
- 6. Navigate to Admin -> Selective Video Streaming -> Video Streaming and confirm that the stream plays back correctly.

Support:

For assistance with SAFARI Montage or SAFARI Montage Selective Video Streaming, please contact SAFARI Montage Technical Support by calling (800) 782-7230 or by visiting <u>http://www.safarimontage.com/support</u>.

