
RAM Installation Instructions T-420:

- 1. Power down the SAFARI Montage server and unplug the power supply.
- 2. Remove the bezel by sliding the bezel latch to the right, swinging the top of the bezel away from the server and disengaging the hooks at the bottom of the bezel.
- 3. Remove the cover by laying the server on its right side, loosen the thumbscrew at the front of the server and sliding the cover forward...
- 4. Using the diagram below, locate the DIMM (memory) locations on the server's motherboard.

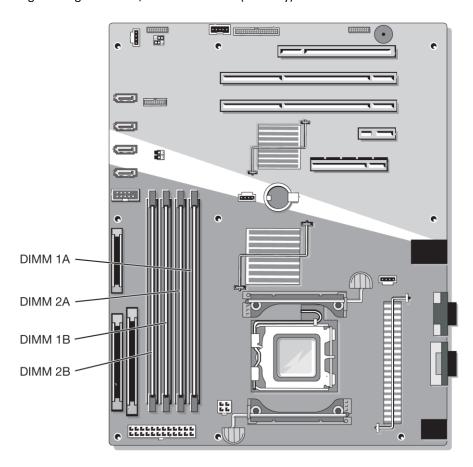

- 5. Remove any existing DIMMs from the server by pressing down and pulling out on the ejectors on each end of the socket until the DIMM pops out.
- 6. Insert the newly received DIMMs by aligning the DIMM's edge connector with the alignment keys on the socket and then insert the DIMM in to the socket by pressing down with your thumbs while pulling up the ejectors with your index fingers until the DIMM locks into the socket. DIMM sockets to be used are 1A, 2A, 1B, 2B.
- 7. Replace the cover and bezel removed in Steps 2 and 3.
- 8. Apply power and turn the server on.

