


RAM Installation Instructions WAN-1240:

1. Power down the SAFARI Montage server and unplug the power supply.
2. Remove the cover by laying the server on its right side, turning the latch release lock, located on top of the system, to the unlocked position, and then lifting up on the latch releasing the cover.
3. Remove the cooling shroud by pulling the blue latches on the shroud outward lifting the shroud straight up to disengage the fan connector and pulling out of the server.
4. Using the diagram below, locate the DIMM (memory) locations on the server's motherboard.

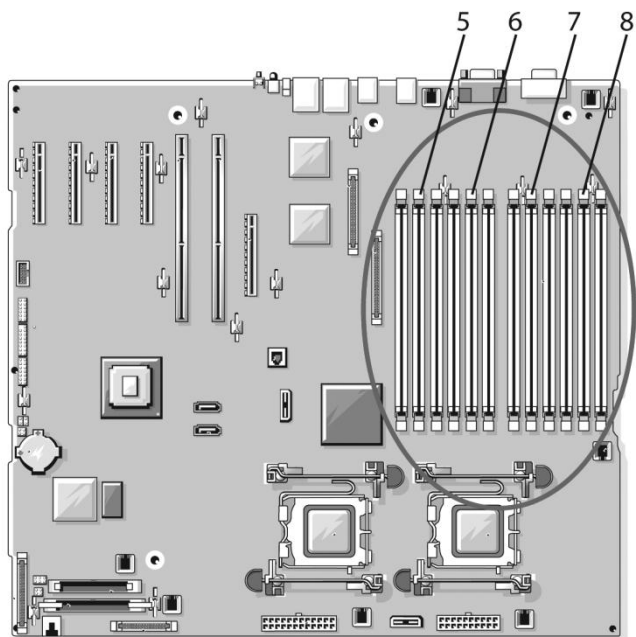

5. Insert the newly received DIMMs by aligning the DIMM's edge connector with the alignment keys on the socket and then insert the DIMM in to the socket by pressing down with your thumbs while pulling up the ejectors with your index fingers until the DIMM locks into the socket. DIMM sockets to be used are 5, 6, 7 and 8.
6. Replace the cooling shroud and cover removed in Steps 2 and 3.
7. Apply power and turn the server on.